

Updating procedure for eXtreme HD flex Plus

Necessary material:

- USB 2.0 device.
- Last available software version.


To proceed with the upgrading, you must have the file with last available version, which you can download from:

<http://www.ftemaximal.com>

From this website, you will reach a ZIP compressed file which must be decompressed in the root folder of the USB Memory device.

Once you have the update file in the root folder of your memory, please proceed to connect the memory at front connector of the receiver.

Select Menu / Tools / Software Upgrade / USB-STB Upgrade and press OK.

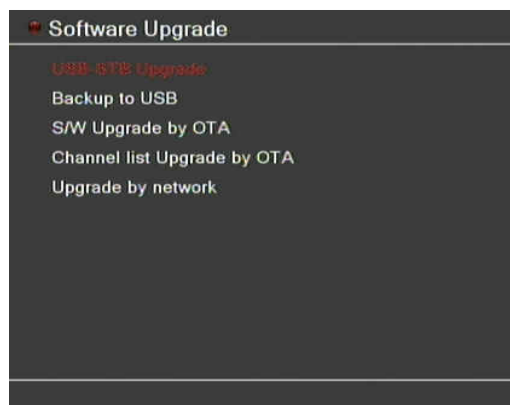


Select the upgrade mode "maincode"

Select the updating file and press "Start" in order to start the updating.



!Attention! Do not power off receiver while updating is running.

When the bar arrives to the 100%, the receiver will reboot automatically.

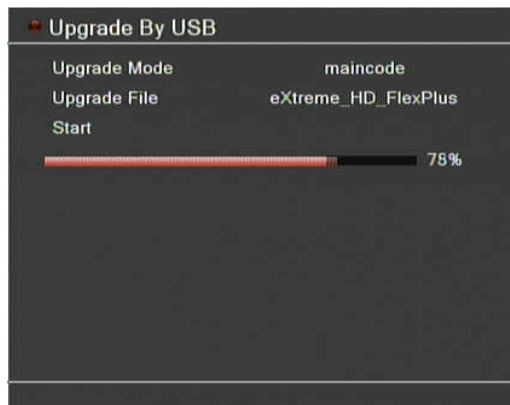

Warning

After the automatic reboot while the receiver show the logo of Fte maximal is possible appears the next message in the screen.

Please, don't switch off the receiver and wait until the update finish. The receiver will reboot automatically.

In this moment the updating is complete.

A dark gray rectangular screen with the text 'Bootloader update do not switch off!!!' in a light gray, monospaced font.

Bootloader update do not switch off!!!