



Installation / User Manual

**Photovoltaic Grid-connected
Microinverter (Built-in WIFI-G3)**

Version:1.0
03/04/2023

Table of Contents

Important Safety Instructions	01-03
Safety Instructions	
Radio Interference Statement	
The Meaning of Symbols	
Microinverter System Introduction	03-05
Microinverters Maximize PV Energy	
Production More Reliable than Centralized or	
String Inverters Simple to Install	
Microinverter Introduction	05
Microinverter System Installation	06-10
Additional Installation	
Components Required Parts	
and Tools from You Parts list	
Installation Procedures	
Microinverter System Operating Instructions	10-11
Troubleshooting	11-13
Status Indications and Error Reporting	
Troubleshooting a Non-operating	
Microinverter	
Replacement	14
Technical Data	14-15
600/800/1000G3 Microinverter Datasheet	
Wiring Diagram	16-17
Monitoring Platform	18
How to Configure the Microinverter to the Router Via Web	19-22
How to connect in APP	23-27

Important Safety Instructions

This manual contains important instructions to follow during installation and maintenance of the Photovoltaic Grid-connected Inverter(Microinverter). To reduce the risk of electrical shock and ensure the safe installation and operation of the Microinverter, the following symbols appear throughout this document to indicate dangerous conditions and important safety instructions.

Specifications subject to change without notice - please ensure you are using the latest manual found at the manufacturer website.

WARNING: This indicates a situation where failure to follow instructions may cause a serious hardware failure or personnel danger if not applied appropriately. Use extreme caution when performing this task.

NOTE: This indicates information that is important for optimized microinverter operation. Follow these instructions strictly.

Safety Instructions

- ✓ Only qualified professionals should install and/or replace the Microinverters. ✓ Perform all electrical installations in accordance with local electrical codes.
- ✓ Before installing or using the Microinverter, please read all instructions and cautionary markings in the technical documents and on the Microinverter system and the solar-array.
- ✓ Be aware that the body of the Microinverter is the heat sink and can reach a temperature of 80°C. To reduce risk of burns, do not touch the body of the Microinverter.
- ✓ **DO NOT** attempt to repair the Microinverter. If it fails, contact technical support to obtain an RMA number and start the replacement process. Damaging or opening the Microinverter will void the warranty.
- ✓ **Caution!**
The external protective earthing conductor is connected to the inverter protective earthing terminal through AC connector.
When disconnecting, disconnect the AC by opening the branch circuit breaker first

but maintain the protective earthing conductor in the branch circuit breaker connect to the inverter ,then disconnect the DC inputs.

- ✓ Please install isolation switching devices on the AC side of the inverter.





Radio Interference Statement



CE EMC Compliance : The equipment can comply with CE EMC, which are designed to protect against harmful interference in a residential installation. The equipment could radiate radio frequency energy and this might cause harmful interference to radio communications if not following the instructions when installing and using the equip- ment. But there is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception,the following measures might resolve the issues:

- B) Consult the dealer or an experienced radio/ TV technical for help.

Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

The Meaning of Symbols

Can be OEM Trademark.	
	Caution, risk of electric shock.
	Caution, risk of burn - Do not touch.
	Caution, hot surface.
	Symbol for the marking of electrical and electronics devices according to Directive 2002/96/EC. Indicates that the device, accessories and the packaging must not be disposed as unsorted municipal waste and must be collected separately at the end of the usage. Please follow Local Ordinances or Regulations for disposal or contact an authorized representative of the manufacturer for information concerning the decommissioning of equipment.

	CE mark is attached to the solar inverter to verify that the unit follows the provisions of the European Low Voltage and EMC Directives.
	Refer to the operating instructions.
Qualified personnel	Person adequately advised or supervised by an electrically skilled person to enable him or her to perceive risks and to avoid hazards which electricity can create. For the purpose of the safety information of this manual, a "qualified person" is someone who is familiar with requirements for safety, refrigeration system and EMC and is authorized to energize, ground, and tag equipment, systems, and circuits in accordance with established safety procedures. The inverter and endues system may only be commissioned and operated by qualified personnel.


Microinverter System Introduction

The Microinverter is used in utility-interactive grid-tied applications, comprised of two key elements:

- Microinverter
- Router

This series microinverter has built-in WIFI module so it can communicate with router directly.

600 / 800 / 1000G3

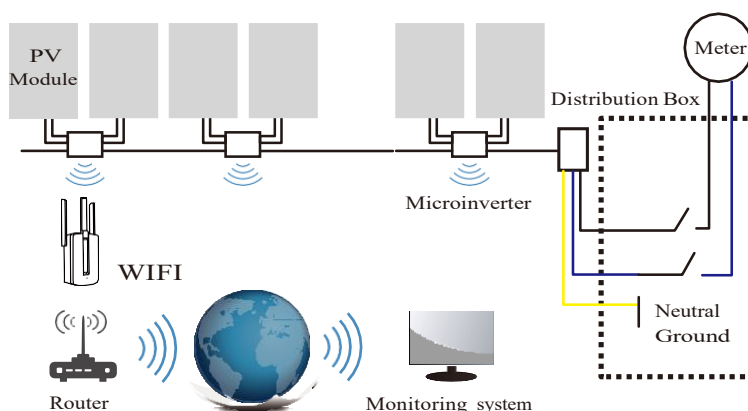

NOTE: If the wireless signal in the area where the microinverter is weak, it is necessary to add a wifi signal booster at a suitable place between the router and the microinverter.

This integrated system improves safety; maximizes solar energy harvest; increases system reliability, and simplifies solar system design, installation, maintenance, and management.

Microinverters Maximize PV Energy Production

Each PV module has individual Maximum Peak Power Tracking (MPPT) controls, which ensures that the maximum power is exported to the utility grid regardless of the performance of the other PV modules in the array. When PV modules in the array are affected by shade, dust, orientation, or any situation in which one module underperforms compared with the other units, the Microinverter ensures top performance from the array by maximizing the performance of each module within the array.

More Reliable than Centralized or String Inverters

The distributed Microinverter system ensures that no single point of system failure exists across the PV system. Microinverters are designed to operate at full power at ambient outdoor temperatures of up to 149°F (65°C). The inverter housing is designed for outdoor installation and complies with the IP65 environmental enclosure rating.

Simple to Install

You can install individual PV modules in any combination of Module quantity, orientation, different type and power rate The Ground wire (PE) of the AC cable is connected to the chassis inside of the Microinverter, potentially eliminating the installation of grounding wire (check local regulation).

Data collection adopts internal wifi, wireless router is needed near the microinverter. When complete the installation of microinverter, configure wireless router with internal wifi (refer to the wifi user manual). The data will be uploaded automatically. Users can monitor and manage the microinverter through corresponding website or APP.

Microinverter Introduction

The Microinverters connect with the single-phase grid, and can also use multiple Micro- inverters in the form of single-phase grid to achieve three-phase grid.

For more information, please see the Technical Data page (P15) of this manual.

Model Number	AC grid	Max. # Per branch
SUN600G3-EU-230	50/60Hz, 230V	8 for 25A breaker
SUN800G3-EU-230	50/60Hz, 230V	6 for 25A breaker
SUN1000G3-EU_230	50/60Hz, 230V	5 for 25A breaker

Microinverter System Installation

A PV system using Microinverters is simple to install. Each Microinverter easily mounts on the PV racking, directly beneath the PV module(s). Low voltage DC wires connect from the PV module directly to the Microinverter, eliminating the risk of high DC voltage. Installation MUST comply with local regulations and technical rules.

Special Statement! An AC GFCI device should not be used to protect the dedicated circuit to the microinverter even though it is an outside circuit. None of the small GFCI devices (5~30mA) are designed for back feeding and will be damaged if back feed. In a similar manner, AC AFCIs have not been evaluated for back feeding and may be damaged if back feed with the output of a PV inverter.

WARNING: Perform all electrical installations in accordance with local electrical codes.

WARNING: Be aware that only qualified professionals should install and/or replace Microinverters.

WARNING: Before installing or using an Microinverter, please read all instructions and warnings in the technical documents and on the Microinverter system itself as well as on the PV array.

WARNING: Be aware that installation of this equipment includes the risk of electric shock.

NOTE: Strongly recommend to install Surge protection Devices in the dedicated meter box.

Additional Installation components

- AC Male and Female Interconnection Connectors (sold separately)
- Sealing end caps(sold separately)



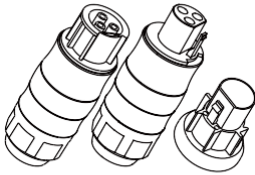
 
Required Parts and Tools from you

In addition to your PV array and its associated hardware, you will need the following items:

- An AC connection junction box
- Mounting hardware suitable for module racking
- Sockets and wrenches for mounting hardware
- Continuous grounding conductor and grounding washers
- A Phillips screwdriver
- A torque wrench

Parts list


Please check the following table, to see whether all the parts are included in the package :

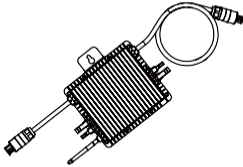 <p>Microinverter x1</p>	 <p>User manual x1</p>	 <p>AC power connectors (optional) x1</p>
 <p>*Antenna for WIFI module x1</p>		

* This antenna is for microinverter that has built-in wifi module.

Installation Procedures

Step 1 - Install the AC branch circuit junction box

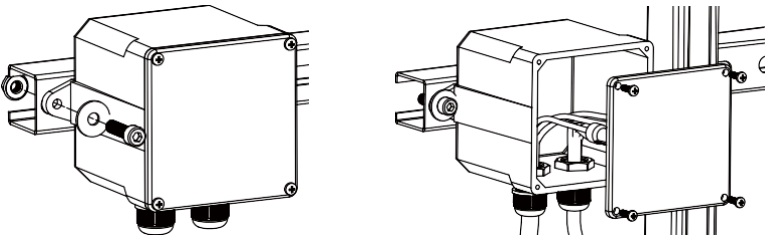


- Install an appropriate junction box at a suitable location on the PV racking system (typically at the end of a branch of modules).
- Connect the open wire end of the AC cable into the junction box using an appropriate gland or strain relief fitting.

- c. Wire the conductors of the AC(230/400Vac): L - red; N - black ;PE - yellow green.
- d. Connect the AC branch circuit junction box to the point of utility Interconnection.


WARNING: Wiring colour code can be different according local regulation,check all the wires of the installation before connecting to the AC cable to be sure they match. Wrong cabling can damage irreparably the microinverters,such an issue is not covered by the warranty.

Step 2 - Attach the Microinverters to the racking or the PV module frame

- a. Mark the location of the Microinverter on the rack, with respect to the PV module junction box or any other obstructions.
- b. Mount one Microinverter at each of these locations using hardware recommended by your module racking vendor.

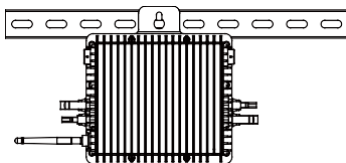

600/800/1000G3 (2MPPT)
Mounting

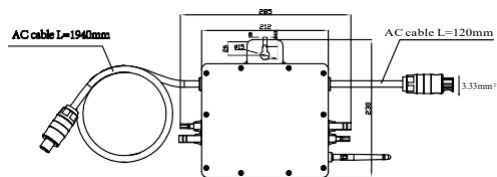

The AC wire on the micro inverter is a TC-ER wire with a wire cross-section area of 3.33mm^2 .

WARNING: Prior to installing any of the microinverters, verify that the utility voltage at the point of common connection matches the voltage rating on microinverter label.


WARNING: Do not place the inverters (including DC and AC connectors) where exposed to the sun, rain or snow, even gap between modules. Allow a minimum of 3/4 (1.5cm.) between the roof and the bottom of the Microinverter to allow proper air flow.

Step 3 - Connect the microinverters in parallel



600/800/1000G3 (2MPPT)
connect in parallel

- Check the Microinverter technical data page 5 for the maximum allowable number of Microinverters on each AC branch circuit.
- Plug the male AC connector of the Microinverter into the female connector to get it connected. AC connector interface as follows.

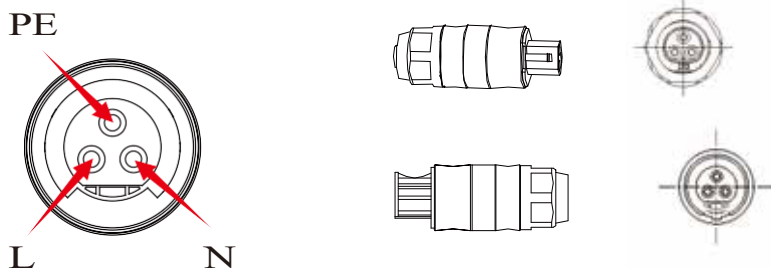


WARNING: DO NOT exceed maximum number of Microinverters in an AC branch circuit, as displayed on the page 5 of this manual.

Step 4 - Install an AC cable protective end cap at the end of AC cable



Step 5 - Connect Microinverter to the PV Modules

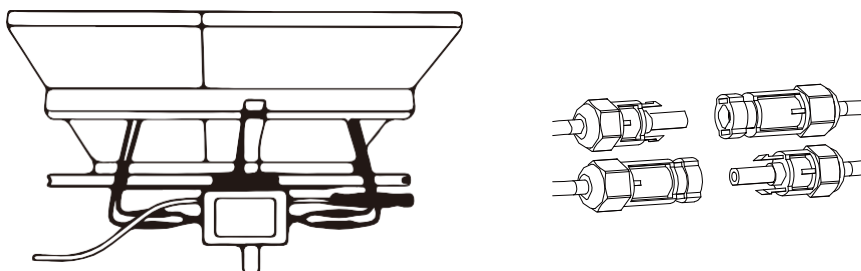

NOTE: When plugging in the DC cables, if AC already available, the Microinverter should immediately blink red light and will start work within the setting time (default 60 seconds). If AC is not available, the red light will blink 3 times quickly and repeat after one second until AC is connected.

Microinverter System Operating Instructions

To operate the microinverter PV system:

1. Turn ON the AC circuit breaker on each microinverter AC branch circuit.
2. Turn ON the main utility-grid AC circuit breaker. Your system will start producing power after a one-minute waiting time.

3. The units should start blinking red one minutes after turning on the AC circuit breaker. Then blue led blinking. This means they are producing power normally, the faster blinking of the blue led means more power generated.
4. Configure the internal wifi module according to its user manual.
5. The Microinverters will start to send performance data over wifi module to the network every 5 minutes. It enables customers to monitor performance data of each microinverter through website and APP.

NOTE: When AC power is applied but the microinverter not started up, about 0.1 A current and 25 VA(W) power for each microinverter may be measured by a power meter. This power is reactive power, not consume from utility grid.

Troubleshooting

Qualified personnel can use the following troubleshooting steps if the PV system does not operate correctly:

Status Indications and Error Reporting

Start up LED

One minute after DC power is first applied to the microinverter, one short red blinks indicate a successful microinverter startup sequence, be equal or greater than two short red blinks after DC power is first applied to the microinverter indicate a failure during microinverter setup.

Operation LED

Flashing Slow Blue - Producing small power
Flashing Fast Blue - Producing big power
Flashing Red - Not producing power
Red blinking two times - AC low-voltage or high-voltage
Red blinking three times - Grid failure

GFDI Error

A four time red LED indicates the Microinverter has detected a Ground Fault Detector Interrupter (GFDI) error in the PV system. Unless the GFDI error has been cleared, the LED will remain four times blinking.

Other Faults

All other faults can be reported to the website and APP.

WARNING: Never disconnect the DC wire connectors under load. Ensure that no current is flowing in the DC wires prior to disconnecting. An opaque covering may be used to cover the module prior to disconnecting the module.

Troubleshooting a non-operating Microinverter

There are two possible overall areas of trouble:

- A. The Microinverter itself may be having problems.
- B. The Microinverter itself is working fine but the communication between microinverter and network has problem. The items below refer to Microinverter issues, not communication issues:

One quick way to tell whether the issue is the Microinverter or the communication problem:

1. Diagnosing from the Microinverter: A red light—either blinking or solid on the Microinverter, or no light at all means it is definitely the Microinverter problem.
2. 0 watts, or 2 watts: Possibly a Microinverter problem

2. Diagnosing from the network:

- a. No-Data-Display: The website and APP don't display any data. Check the network configuration.
- b. Only display microinverter is online but no data. This maybe because server is updating.

To troubleshoot a non-operating Microinverter, Follow the steps below in order:

1. Verify the utility voltage and frequency are within ranges shown in the Technical Data section of this manual.
2. Check the connection to the utility grid. Disconnect AC firstly, then disconnect DC and make sure the utility grid voltage can be measured at AC connector. Never disconnect the DC wires while the microinverter is producing power. Re-connect the DC module connectors and watch for three short LED flashes.
3. Check the AC branch circuit interconnection between all the microinverters. Verify each inverter is energized by the utility grid as described in the previous step.
4. Make sure that any AC breaker are functioning properly and are closed.
5. Check the DC connections between the microinverter and the PV module.
6. Verify the PV module DC voltage is within the allowable range shown in the Technical Data of this manual.
7. If the problem still persists, please contact technical support.

WARNING: Do not attempt to repair the microinverter. If troubleshooting methods fail, please call for Technical Support

Replacement

Follow the procedure to replace a failed Microinverter

- A. Disconnect the Microinverter from the PV Module, in the order shown below:
 1. Disconnect the AC by turning off the branch circuit breaker.
 2. Disconnect the AC connector of the microinverter.
 3. Cover the module with an opaque cover.
 4. Disconnect the PV module DC wire connectors from the Microinverter.
 5. Remove the Microinverter from the PV array racking.
- B. Install a replaced Microinverter to the bracket then remove the opaque cover. Remember to observe the flashing LED light as soon as the new Microinverter is plugged into the DC cables.
- C. Connect the AC cable of the replacement Microinverter.

Technical Data

WARNING: Be sure to verify the voltage and current specifications of your PV module match with those of the Microinverter. Please refer to the datasheet or user manual.

WARNING: You must match the DC operating voltage range of the PV module with the allowable input voltage range of the Microinverter.


WARNING: The maximum open circuit voltage of the PV module must not exceed the specified maximum input voltage of the inverter.

600G3/800G3/1000G3 Microinverter Datasheet

Model	SUN600G3- EU-230	SUN800G3- EU-230	SUN1000G3- EU-230
Input Data (DC)			
Recommended input power(STC)	210-420W(2 Piece)	210-500W(2 Piece)	210-600W(2 Piece)
Maximum input DC voltage	60V		
MPPT Voltage Range	25~55V		
MPPT Full Power Voltage Range(V)	30V-55V	33V-55V	40V-55V
Min.DC input voltage(V)	20V		
Max DC short circuit current	19.5Ax2		
Max input current	13Ax2		
Output Data (AC)			
Rated output Power	600W	800W	1000W
Max.AC Output Power	600W	800W	1000W
Rated output Current	2.7/2.6A	3.6/3.5A	4.5/4.4A
Max.AC Output Current(A)	2.7/2.6A	3.6/3.5A	4.5/4.4A
Nominal voltage / range	220V/0.85Un-1.1Un 230V/ 0.85Un-1.1Un		
Nominal frequency	50/60Hz		
Extended frequency / range	45~55Hz / 55~65Hz		
Power factor	1		
Maximum unit per branch	8	6	5
Max. allowed altitude operating	<4000m		
Max.inverter backfeed current to the array	0A		
Max output fault current	10A		
Efficiency			
CEC weighted efficiency	95%		
Peak inverter efficiency	96.5%		
Static MPPT efficiency	99%		
Night time power consumption	50mW		
Mechanical Data			
Ambient temperature range	-40 ℃ ~ 65 ℃		
Dimensions(W×H×D mm)	212W×230H×40D (Without mounting bracket and cable)		
Weight (kg)	3.15		
Cooling	Natural cooling		
Enclosure environmental rating	IP67		
Protective class	Class I		
Features			
Compatibility	Compatible with 60,72 cell PV modules		
Communication	WiFi / Zigbee		
Compliance	EN50549,VDE0126,VDE4105,IEC62109,CE,INMETRO		
Warranty	10 Years		


K jfjb['8 ju[fUa

Sample Wiring Diagram Three Phase

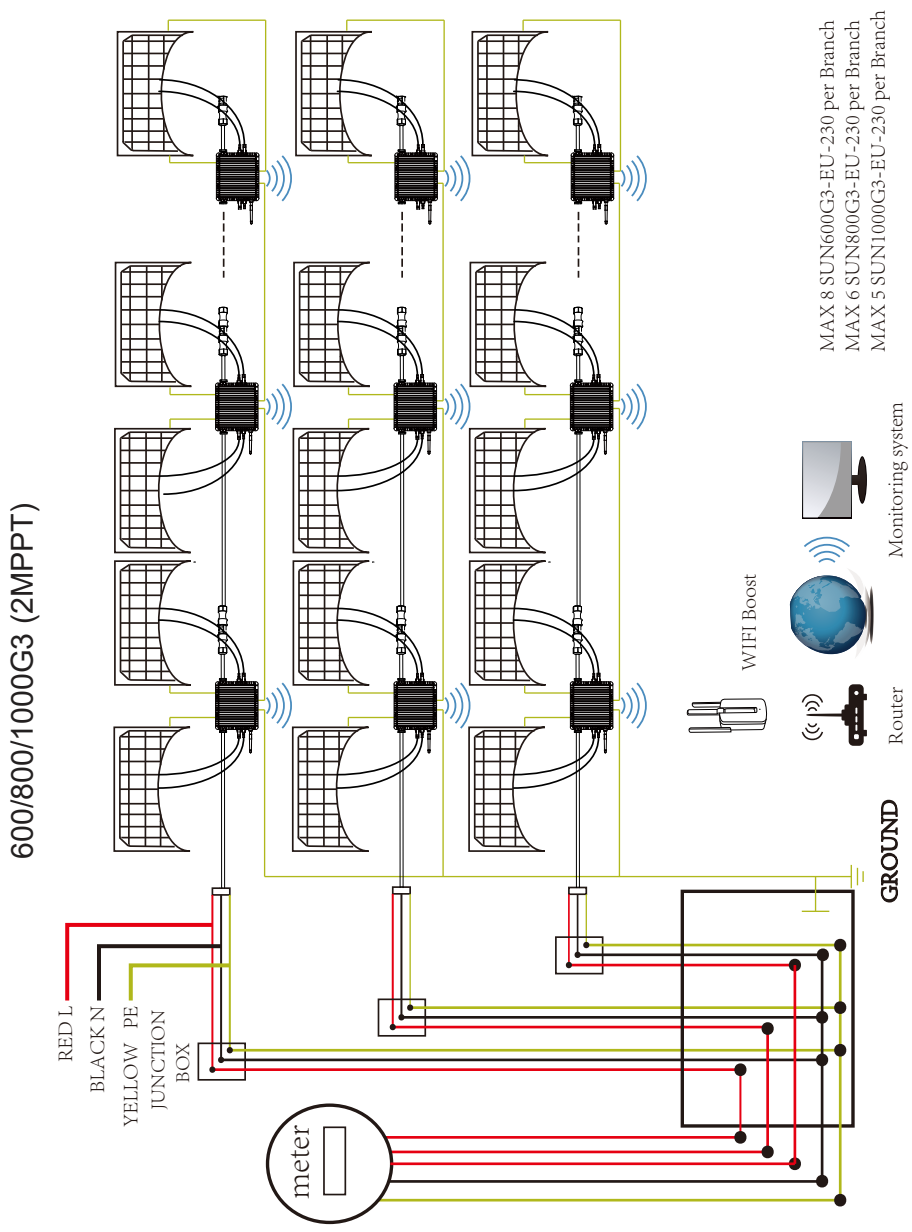

Sample Wiring Diagram Single Phase

600/800/1000G3 (2MPPT)

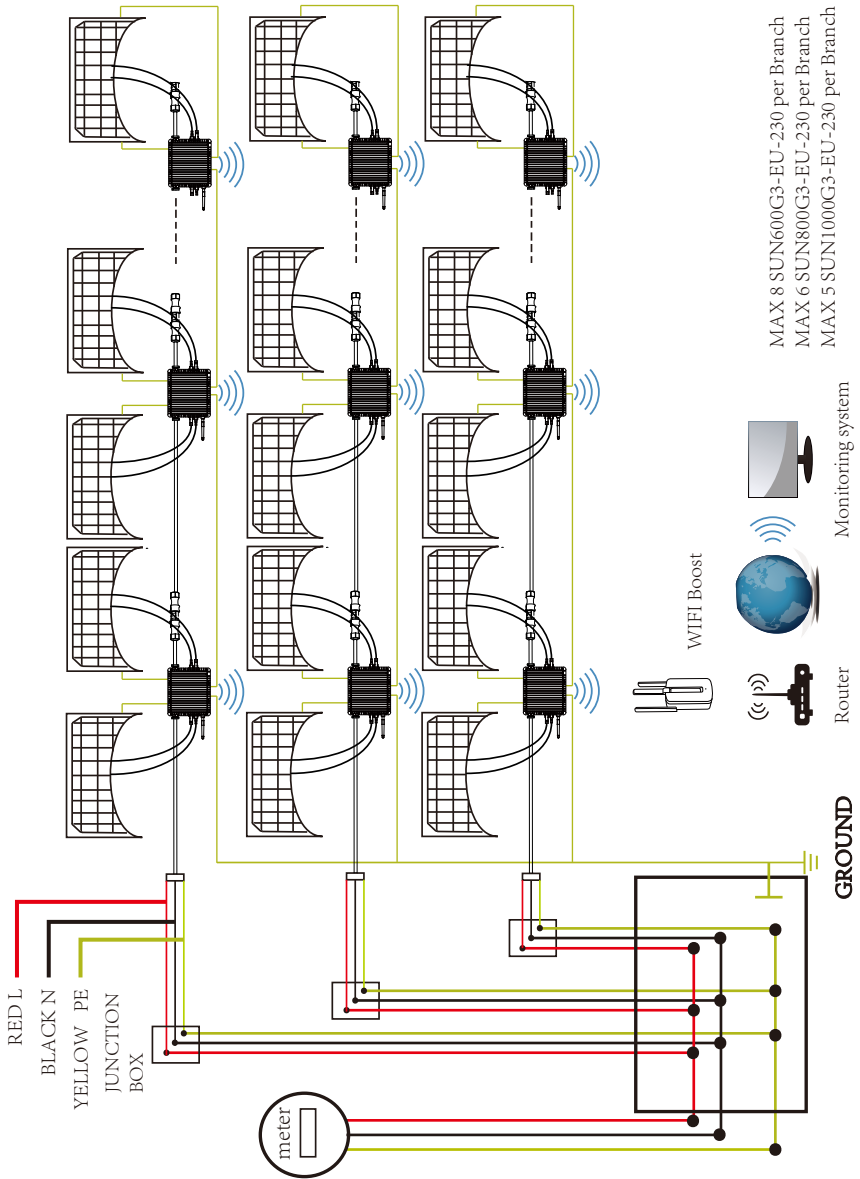

Monitoring Platform

This series microinverter has built-in WIFI modular which is able to connect router directly. For WIFI configuration, please check the manual of “Built-in WIFI modular microinverter WIFI configuration Manual”

Web monitoring address:

<https://pro.solarmanpv.com> (for installer or dealer accounts)

<https://home.solarmanpv.com> (for end user account)

For mobile phone monitoring system, scan the QR code to download the APP. Also you can find it by searching “solarman business” in App store or Google Play store, and this App is for distributor/installer.

Find it by searching “solarman smart” in App store or Google Play store and choose “solarman smart”, this app is for plant owner.




SOLARMAN Smart
for end user account



SOLARMAN Business
for distributor or
installer account


How to Configure the Microinverter to the Router Via Web

1. Turn on the wireless network of your PC or smartphone.
2. Select logger network (network name: AP_SN) and connect.
The default password is 12345678.

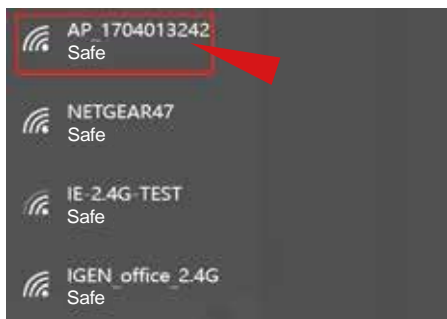

Microinverter SN: 2208314002 Built-in datalogger :1704013242

3. Open a browser and enter 10.10.100.254. Both username and password are "admin". (Recommended browser: IE 8+, Chrome 15+, Firefox 10+).

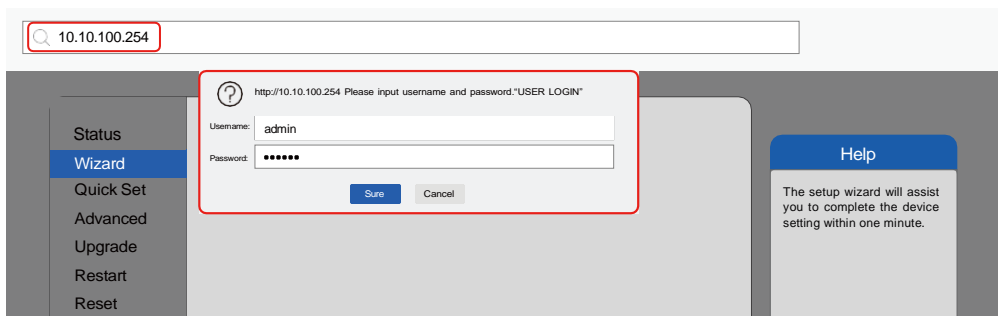

4. Browser jumps to "Status" page, the basic information is listed there.

Status		Help																																														
Wizard	<p>- Inverter information</p> <table border="1"> <tr><td>Inverter serial number</td><td>---</td></tr> <tr><td>Firmware version(main)</td><td>---</td></tr> <tr><td>Firmware version(slave)</td><td>---</td></tr> <tr><td>Inverter model</td><td>---</td></tr> <tr><td>Rated power</td><td>--- W</td></tr> <tr><td>Current power</td><td>--- W</td></tr> <tr><td>Yield today</td><td>--- kWh</td></tr> <tr><td>Current power</td><td>--- kWh</td></tr> <tr><td>Alerts</td><td>---</td></tr> <tr><td>Last updated</td><td>---</td></tr> </table> <p>- Device information</p> <table border="1"> <tr><td>Device serial number</td><td>1704013242</td></tr> <tr><td>Firmware version</td><td>LSW3_14_FFFF_1.0.23</td></tr> <tr><td>Wireless AP mode</td><td>Enable</td></tr> <tr><td>SSID</td><td>AP_1704013242</td></tr> <tr><td>IP address</td><td>10.10.100.254</td></tr> <tr><td>MAC address</td><td>8C:D8:B3:71:8D:B0</td></tr> <tr><td>Wireless STA mode</td><td>Disable</td></tr> <tr><td>Router SSID</td><td></td></tr> <tr><td>Signal Quality</td><td></td></tr> <tr><td>IP address</td><td></td></tr> <tr><td>MAC address</td><td></td></tr> </table> <p>- Remote server information</p> <table border="1"> <tr><td>Remote server A</td><td>Not connected</td></tr> <tr><td>Remote server B</td><td>Not connected</td></tr> </table>	Inverter serial number	---	Firmware version(main)	---	Firmware version(slave)	---	Inverter model	---	Rated power	--- W	Current power	--- W	Yield today	--- kWh	Current power	--- kWh	Alerts	---	Last updated	---	Device serial number	1704013242	Firmware version	LSW3_14_FFFF_1.0.23	Wireless AP mode	Enable	SSID	AP_1704013242	IP address	10.10.100.254	MAC address	8C:D8:B3:71:8D:B0	Wireless STA mode	Disable	Router SSID		Signal Quality		IP address		MAC address		Remote server A	Not connected	Remote server B	Not connected	<p>The device can be used as a wireless access point(AP mode) to facilitate users to configure the device, or it can also be used as a wireless information terminal (STA mode) to connect the remote server via wireless router.</p> <p>Status of remote server</p> <ul style="list-style-type: none"> Not connected: Connection to server failed last time. <p>If under such status, please check the issues as follows:</p> <ol style="list-style-type: none"> check the device information to see whether IP address is obtained or not; check if the router is connected to internet or not; check if a firewall is set on the router or not; <ul style="list-style-type: none"> Connected: connection to server successful last time; Unknown: No connection to server. Please check again in 5 minutes.
Inverter serial number	---																																															
Firmware version(main)	---																																															
Firmware version(slave)	---																																															
Inverter model	---																																															
Rated power	--- W																																															
Current power	--- W																																															
Yield today	--- kWh																																															
Current power	--- kWh																																															
Alerts	---																																															
Last updated	---																																															
Device serial number	1704013242																																															
Firmware version	LSW3_14_FFFF_1.0.23																																															
Wireless AP mode	Enable																																															
SSID	AP_1704013242																																															
IP address	10.10.100.254																																															
MAC address	8C:D8:B3:71:8D:B0																																															
Wireless STA mode	Disable																																															
Router SSID																																																
Signal Quality																																																
IP address																																																
MAC address																																																
Remote server A	Not connected																																															
Remote server B	Not connected																																															

5. Turn to "Wizard" page, click "Refresh" to search the wireless network. Select the target network and click "Next".

Status		Help																																																										
Wizard	<p>Please select your current wireless network:</p> <table border="1"> <tr><td><input checked="" type="radio"/> IE-2.4G-TEST</td><td>54:A7:37:09:13</td><td>82</td><td>1</td></tr> <tr><td><input type="radio"/> AP_1753738492</td><td>08:E0:52:0B:52:C</td><td>80</td><td>1</td></tr> <tr><td><input type="radio"/> TGEN_office_2.4G</td><td>30:EAE7:36:B:36</td><td>78</td><td>2</td></tr> <tr><td><input type="radio"/> TGENTEST</td><td>08:E0:52:0B:52:C</td><td>76</td><td>1</td></tr> <tr><td><input type="radio"/> TGEN_office_2.4G</td><td>E8:65:D4:F2:15:88</td><td>74</td><td>6</td></tr> <tr><td><input type="radio"/> TGEN_office_2.4G</td><td>90:5D:7C:97:95:29</td><td>74</td><td>1</td></tr> <tr><td><input type="radio"/> TGEN_office_2.4G</td><td>90:5D:7C:97:95:27</td><td>72</td><td>1</td></tr> <tr><td><input type="radio"/> TGEN_office_2.4G</td><td>90:5D:7C:97:C9:E5</td><td>72</td><td>1</td></tr> <tr><td><input type="radio"/> AP_1719065936</td><td>30:EAE7:36:CF:B2</td><td>70</td><td>1</td></tr> <tr><td><input type="radio"/> TGEN_office_2.4G</td><td>90:5D:7C:97:C9:E3</td><td>70</td><td>1</td></tr> <tr><td><input type="radio"/> TESR+???</td><td>4A:E:EC:9E:C3:3E</td><td>70</td><td>11</td></tr> <tr><td><input type="radio"/> TGEN_office_2.4G</td><td>08:E0:52:0B:57:EE</td><td>66</td><td>11</td></tr> <tr><td><input type="radio"/> AP_517075065</td><td>98:D8:63:76:BA:24</td><td>66</td><td>4</td></tr> </table> <p>* Note: When RSSI of the selected WiFi network is lower than 15%, the connection may be unstable, please select other available network or shorten the distance between the device and router.</p> <p>Refresh</p> <p>Add wireless network manually:</p> <table border="1"> <tr><td>Network name (SSID) (Note: case sensitive)</td><td>IE-2.4G-TEST</td></tr> <tr><td>Encryption method</td><td>WPA2PSK</td></tr> <tr><td>Encryption algorithm</td><td>AES</td></tr> </table> <p>Next</p> <p>1 2 3 4</p>	<input checked="" type="radio"/> IE-2.4G-TEST	54:A7:37:09:13	82	1	<input type="radio"/> AP_1753738492	08:E0:52:0B:52:C	80	1	<input type="radio"/> TGEN_office_2.4G	30:EAE7:36:B:36	78	2	<input type="radio"/> TGENTEST	08:E0:52:0B:52:C	76	1	<input type="radio"/> TGEN_office_2.4G	E8:65:D4:F2:15:88	74	6	<input type="radio"/> TGEN_office_2.4G	90:5D:7C:97:95:29	74	1	<input type="radio"/> TGEN_office_2.4G	90:5D:7C:97:95:27	72	1	<input type="radio"/> TGEN_office_2.4G	90:5D:7C:97:C9:E5	72	1	<input type="radio"/> AP_1719065936	30:EAE7:36:CF:B2	70	1	<input type="radio"/> TGEN_office_2.4G	90:5D:7C:97:C9:E3	70	1	<input type="radio"/> TESR+???	4A:E:EC:9E:C3:3E	70	11	<input type="radio"/> TGEN_office_2.4G	08:E0:52:0B:57:EE	66	11	<input type="radio"/> AP_517075065	98:D8:63:76:BA:24	66	4	Network name (SSID) (Note: case sensitive)	IE-2.4G-TEST	Encryption method	WPA2PSK	Encryption algorithm	AES	<p>The setup wizard will assist you to complete the device setting within one minute.</p>
<input checked="" type="radio"/> IE-2.4G-TEST	54:A7:37:09:13	82	1																																																									
<input type="radio"/> AP_1753738492	08:E0:52:0B:52:C	80	1																																																									
<input type="radio"/> TGEN_office_2.4G	30:EAE7:36:B:36	78	2																																																									
<input type="radio"/> TGENTEST	08:E0:52:0B:52:C	76	1																																																									
<input type="radio"/> TGEN_office_2.4G	E8:65:D4:F2:15:88	74	6																																																									
<input type="radio"/> TGEN_office_2.4G	90:5D:7C:97:95:29	74	1																																																									
<input type="radio"/> TGEN_office_2.4G	90:5D:7C:97:95:27	72	1																																																									
<input type="radio"/> TGEN_office_2.4G	90:5D:7C:97:C9:E5	72	1																																																									
<input type="radio"/> AP_1719065936	30:EAE7:36:CF:B2	70	1																																																									
<input type="radio"/> TGEN_office_2.4G	90:5D:7C:97:C9:E3	70	1																																																									
<input type="radio"/> TESR+???	4A:E:EC:9E:C3:3E	70	11																																																									
<input type="radio"/> TGEN_office_2.4G	08:E0:52:0B:57:EE	66	11																																																									
<input type="radio"/> AP_517075065	98:D8:63:76:BA:24	66	4																																																									
Network name (SSID) (Note: case sensitive)	IE-2.4G-TEST																																																											
Encryption method	WPA2PSK																																																											
Encryption algorithm	AES																																																											

6. Enter the password and click Next.

Status
Wizard
Quick Set
Advanced
Upgrade
Restart
Reset

Please fill in the following information:

Password(8-64 bytes)
(Note: case sensitive)

☐ Show Password

Obtain an IP address automatically

IP address

Subnet mask

Gateway address

DNS server address

1 2 3 4

Help

Most systems support the function of DHCP to obtain IP address automatically. Please select disable and add it manually if your router does not support such function.

7. Users can select any options below to enhance the security and click Next.

Status
Wizard
Quick Set
Advanced
Upgrade
Restart
Reset

Enhance Security

You can enhance your system security by choosing the following methods

☐ Hide AP

☐ Change the encryption mode for AP

☐ Change the user name and password for Web server

1 2 3 4

Help

Change the encryption mode for AP
If you set password for the AP network, you will need to enter the password to connect to AP.

Change the user name and password for Web server
If you change the username and password for the web server, you will need to enter the new username and password to get access to the setting page.

8. If the setup is successful, the following page will pop up and click OK to reboot the micro inverter.

Status
Wizard
Quick Set
Advanced
Upgrade
Restart
Reset

Setting complete!

Click OK, the settings will take effect and the system will restart immediately.

If you leave this interface without clicking OK, the settings will be ineffective.

Back
OK

1
2
3
4

Help

After clicking OK, the system will restart immediately.

9. Connect to logger AP network again, then log in to 10.10.100.254 by Browser, and check the system info of "Status" page. After the network setting is done, the remote server A or B should be "connected".

Status
Wizard
Quick Set
Advanced
Upgrade
Restart
Reset

Inverter information

Inverter serial number	---
Firmware version(main)	---
Firmware version(slave)	---
Inverter model	---
Rated power	---W
Current power	---W
Yield today	---kWh
Current power	---kWh
Alerts	---
Last updated	---

Device information

Device serial number	1704013242
Firmware version	LSW3_14_FFFF_1.0.23
Wireless AP mode	Disable
SSID	
IP address	
MAC address	
Wireless STA mode	Enable
Router SSID	IE-2.4G-TEST
Signal Quality	100%
IP address	172.16.30.247
MAC address	98:D8:63:71:8D:B0

Remote server information

Remote server A	connected
Remote server B	Not connected

Help

The device can be used as a wireless access point(AP mode) to facilitate users to configure the device, or it can also be used as a wireless information terminal (STA mode) to connect the remote server via wireless router.

Status of remote server

- Not connected: Connection to server failed last time.

If under such status, please check the issues as follows:

- check the device information to see whether IP address is obtained or not;
- check if the router is connected to internet or not;
- check if a firewall is set on the router or not;

- Connected: connection to server successful last time;
- Unknown: No connection to server. Please check again in 5 minutes.


10.If both remote server A and B are "Not connected", please refresh the page or repeat the previous steps. If the "Signal Quality" is lower than 40%, please move your Router closer to the Microinverter.

How to connect in APP

1. Registration

Open the app of SOLARMAN Smart and register an account. Click "Register" and create your account here.

The installer who has set up your plant must have previously created the plant in its Solarman Business version and granted the rights to your account to be able to add the plant.

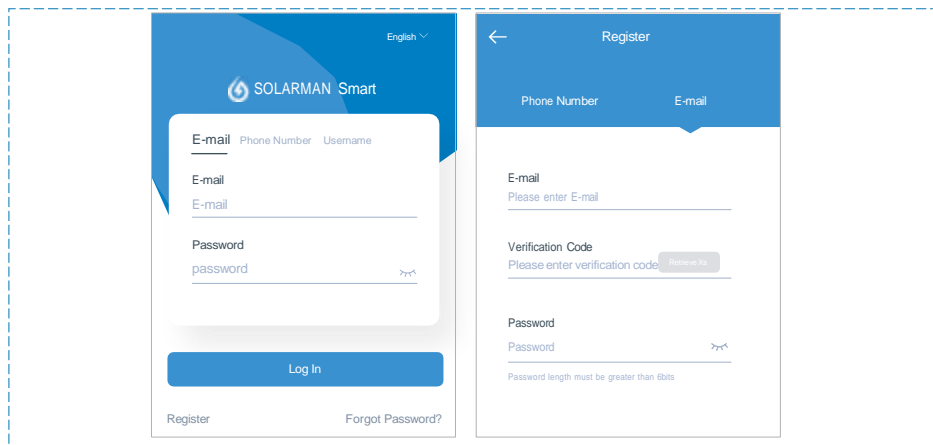


The registration process in the SOLARMAN Smart app involves two main steps:

- Login/Registration Screen:** Users can log in using E-mail, Phone Number, or Username. There is a "Log In" button and links for "Register" and "Forgot Password?".
- Register Screen:** Users can register by providing their E-mail, Verification Code, and Password. There is a "Register" button and a note that the password length must be greater than 6 bits.

2. Create a Plant

Click "Add Now" to create your plant.

Please fill in plant basic info and other info here.

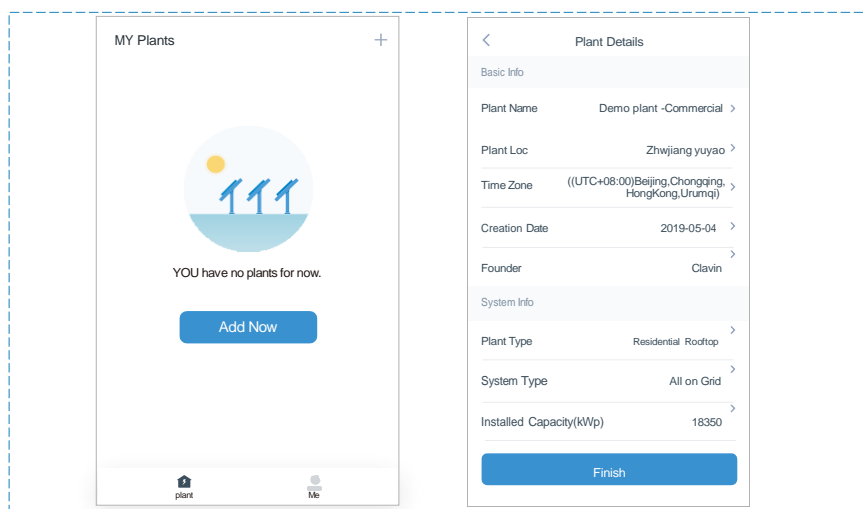


The plant creation process in the SOLARMAN Smart app involves two main steps:

- MY Plants Screen:** Users can view their plants and click "Add Now" to create a new plant.
- Plant Details Form:** Users can fill in the following information:
 - Basic Info:**
 - Plant Name: Demo plant -Commercial
 - Plant Loc: Zhwjiang yuyao
 - Time Zone: (UTC+08:00)Beijing,Chongqing,HongKong,Unumqi
 - Creation Date: 2019-05-04
 - Founder: Clavin
 - System Info:**
 - Plant Type: Residential Rooftop
 - System Type: All on Grid
 - Installed Capacity(kWp): 18350

3. Add a Logger


Optional 1: Enter the logger SN manually.

Optional 2: Click the icon in the right and scan the QR code to enter logger SN. You can find logger SN on the carton packaging or on the logger body.

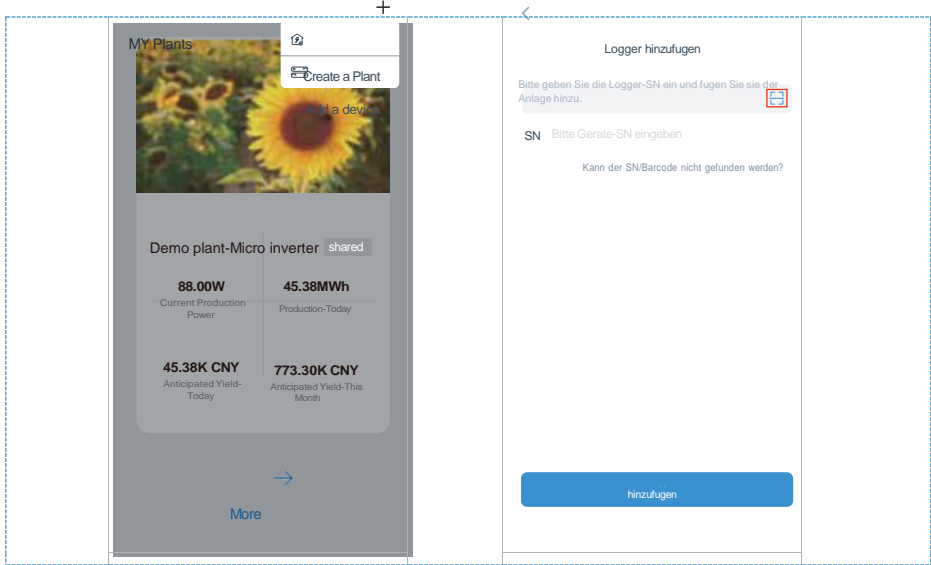

4. Network Configuration

After the logger is added, please configure the network to ensure normal operation. Go to "Plant Details"->"Device List", find the target SN and click "Device Networking".

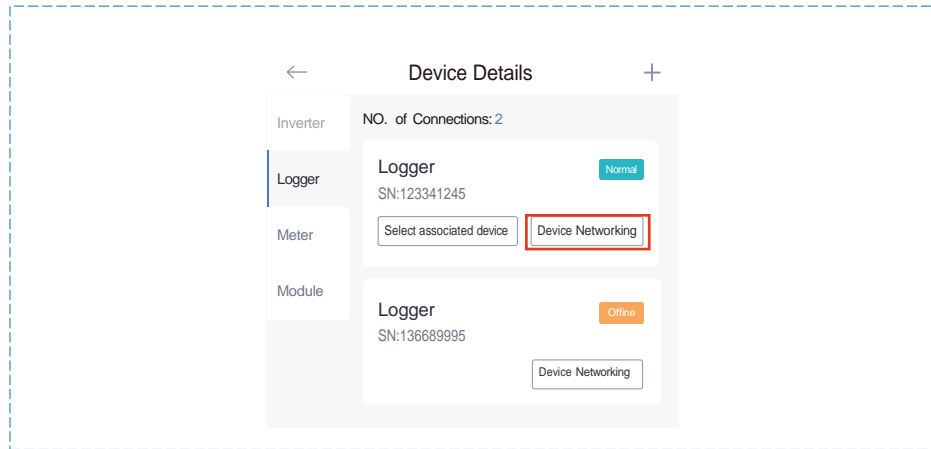

Step 1 : Confirm Wi-Fi Info

Please make sure your phone has connected to the right WiFi network. And click "Start to configure".



Notice:
5G WiFi is not supported .
Special characters (e.g., ; , „‘=’””) in router name and password are not supported.

←

SN:2312423

Password

App_only

Change network

5G frequency band is not supported.
Please connect to 2.4G frequency band.


Start to configure

Step 2 : Connect to AP network

Click " Go to connect" and find the right "AP_XXXXXXXXXXXX" network (XXXXXXXXXXXX refers to logger SN).

The password is required, please input "12345678".

Go back to SOLARMAN Smart APP after connecting to AP network.

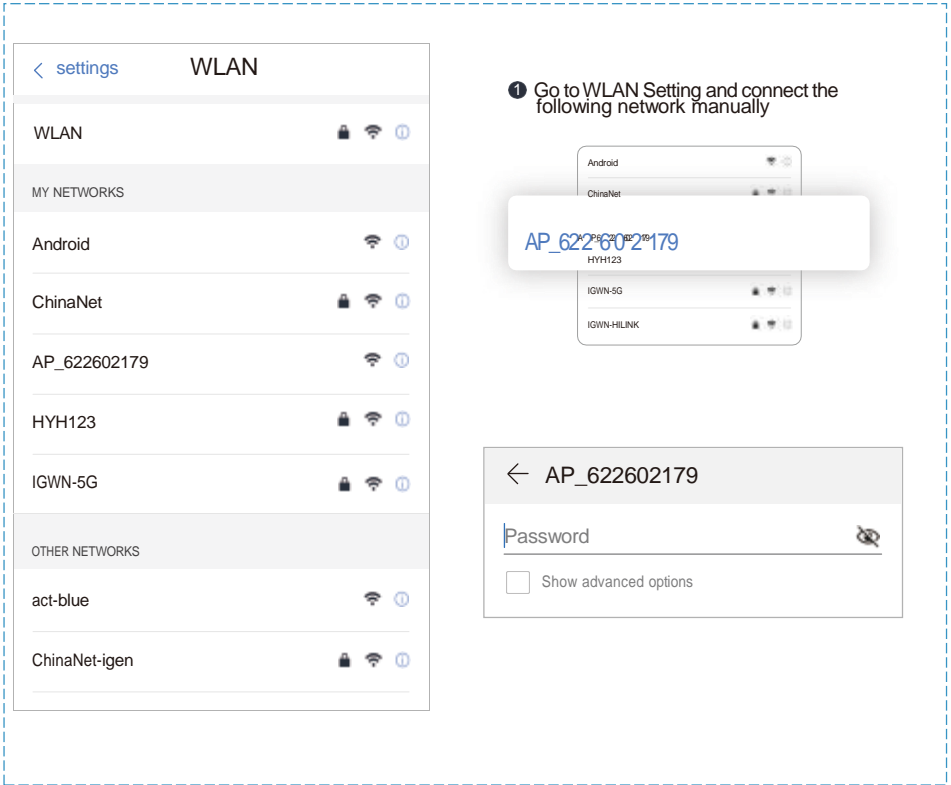

Step 3 : Auto Configuration

Please wait for a while to complete the configuration. Then system will turn to the following page.

Click "Done" to check plant data. (Usually, the data will be updated in 10 mins)

